

# Dispensit 902-20

332097B

EN

*Patented dispense system for precise one-component micro-dispensing.*

## Dispense Valve

100 psi (0.7 MPa, 7 bar) Maximum Air Working Pressure  
60 psi (0.4 MPa, 4 bar) Maximum Material Inlet Pressure



### Important Safety Instructions

Read all warnings and instructions in this manual.  
Save these instructions.



# Contents

<b>902-20 Valve Models</b> .....	<b>2</b>	<b>Periodic Maintenance</b> .....	<b>12</b>
<b>Warnings</b> .....	<b>3</b>	Pressure Relief Procedure .....	12
<b>General Information</b> .....	<b>5</b>	Dispense Needle Replacement .....	12
Description .....	5	Dispense Tube Replacement .....	12
Safety Information .....	5	<b>Parts</b> .....	<b>13</b>
<b>Setup</b> .....	<b>6</b>	<b>Valve Disassembly</b> .....	<b>15</b>
<b>Description of Operation</b> .....	<b>9</b>	<b>Cleaning</b> .....	<b>15</b>
<b>Setup Procedure</b> .....	<b>10</b>	<b>Valve Reassembly</b> .....	<b>16</b>
Mounting Dispense Valve .....	10	<b>Troubleshooting</b> .....	<b>17</b>
Air Controller .....	10	<b>Technical Data</b> .....	<b>18</b>
<b>Operating Procedures</b> .....	<b>11</b>	<b>Graco Standard Warranty</b> .....	<b>20</b>
Dry System Checkout .....	11	<b>Graco Information</b> .....	<b>20</b>
Material Loading .....	11		
Wet System Checkout .....	11		

## 902-20 Valve Models

902-20 Valves		
Part No.	Configuration	Description
A1A09007	VALVE, 902-20-M1-REMOTE-HP.170	PINCH TUBE VALVE, REMOTE FEED, .170 MATERIAL TUBE, TPE PVC WETTED COMPONENTS
A1A09004	VALVE, 902-20-M1-REMOTE-HU.125	PINCH TUBE VALVE, REMOTE FEED, .125 MATERIAL TUBE TPE URETHANE WETTED COMPONENTS
A1A09003	VALVE, 902-20-M1-REMOTE-HP.250	PINCH TUBE VALVE, REMOTE FEED, .250 MATERIAL TUBE, TPE PVC WETTED COMPONENTS

# Warnings

The following warnings are for the setup, use, grounding, maintenance, and repair of this equipment. The exclamation point symbol alerts you to a general warning and the hazard symbols refer to procedure-specific risks. When these symbols appear in the body of this manual or on warning labels, refer back to these Warnings. Product-specific hazard symbols and warnings not covered in this section may appear throughout the body of this manual where applicable.

 <h1 style="margin: 0;">WARNING</h1>	
  	<p><b>PRESSURIZED EQUIPMENT HAZARD</b></p> <p>Fluid from the equipment, leaks, or ruptured components can splash in the eyes or on skin and cause serious injury.</p> <ul style="list-style-type: none"> <li>• Follow the <b>Pressure Relief Procedure</b> when you stop spraying/dispensing and before cleaning, checking, or servicing equipment.</li> <li>• Tighten all fluid connections before operating the equipment.</li> <li>• Check hoses, tubes, and couplings daily. Replace worn or damaged parts immediately.</li> </ul>
	<p><b>TOXIC FLUID OR FUMES HAZARD</b></p> <p>Toxic fluids or fumes can cause serious injury or death if splashed in the eyes or on skin, inhaled, or swallowed.</p> <ul style="list-style-type: none"> <li>• Read Safety Data Sheet (SDS) to know the specific hazards of the fluids you are using.</li> <li>• Store hazardous fluid in approved containers, and dispose of it according to applicable guidelines.</li> </ul>
	<p><b>BURN HAZARD</b></p> <p>Equipment surfaces and fluid that is heated can become very hot during operation. To avoid severe burns:</p> <ul style="list-style-type: none"> <li>• Do not touch hot fluid or equipment.</li> </ul>
 	<p><b>PLASTIC PARTS CLEANING SOLVENT HAZARD</b></p> <p>Many cleaning solvents can degrade plastic parts and cause them to fail, which could cause serious injury or property damage.</p> <ul style="list-style-type: none"> <li>• Use only compatible solvents to clean plastic structural or pressure-containing parts.</li> <li>• See <b>Technical Specifications</b> in all equipment manuals for materials of construction. Consult the solvent manufacturer for information and recommendations about compatibility.</li> </ul>

# **WARNING**



## **PERSONAL PROTECTIVE EQUIPMENT**

Wear appropriate protective equipment when in the work area to help prevent serious injury, including eye injury, hearing loss, inhalation of toxic fumes, and burns. Protective equipment includes but is not limited to:

- Protective eyewear, and hearing protection.
- Respirators, protective clothing, and gloves as recommended by the fluid and solvent manufacturer.



## **EQUIPMENT MISUSE HAZARD**

Misuse can cause death or serious injury.

- Do not operate the unit when fatigued or under the influence of drugs or alcohol.
- Do not exceed the maximum working pressure or temperature rating of the lowest rated system component. See **Technical Data** in all equipment manuals.
- Use fluids and solvents that are compatible with equipment wetted parts. See **Technical Data** in all equipment manuals. Read fluid and solvent manufacturer's warnings. For complete information about your material, request Safety Data Sheet (SDS) from distributor or retailer.
- Do not leave the work area while equipment is energized or under pressure.
- Turn off all equipment and follow the **Pressure Relief Procedure** when equipment is not in use.
- Check equipment daily. Repair or replace worn or damaged parts immediately with genuine manufacturer's replacement parts only.
- Do not alter or modify equipment. Alterations or modifications may void agency approvals and create safety hazards.
- Make sure all equipment is rated and approved for the environment in which you are using it.
- Use equipment only for its intended purpose. Call your distributor for information.
- Route hoses and cables away from traffic areas, sharp edges, moving parts, and hot surfaces.
- Do not kink or over bend hoses or use hoses to pull equipment.
- Keep children and animals away from work area.
- Comply with all applicable safety regulations.



## Changing Materials

### **NOTICE**

Changing the material types used in your equipment requires special attention to avoid equipment damage and downtime.

- When changing materials, flush the equipment multiple times to ensure it is thoroughly clean.
- Always clean the fluid inlet strainers after flushing.
- Check with your material manufacturer for chemical compatibility.
- When changing between epoxies and urethanes or polyureas, disassemble and clean all fluid components and change hoses. Epoxies often have amines on the B (hardener) side. Polyureas often have amines on the B (resin) side.

# General Information

## Description

The Model 902-20 Positive Displacement Pinch Action Dispense Valve with micrometer adjustment is designed for applications that require dot-to-dot volumetric consistency. It has material viscosity dispensing capability from water type material to high viscosity epoxies and metal filled pastes. This valve also has a fail-safe design to prevent material dumping in ease of power failure. All wetted parts are disposable for easy maintenance and cleaning. It comes complete with the following:

- Model 902-20 Dispense Valve
- Two 3 foot (1 m) sections of Pneumatic Air Line
- One package of Replacement Dispense Tubes (type as ordered)
- Micrometer-Faceplate Assembly mounted on Dispense Valve
- Syringe (size as ordered)
- Optional Syringe Clamp (comes with syringe option)
- Receiver Cap with air line (comes with syringe option)
- Operating Manual

## Safety Information

This product should be used only by employees who have been given appropriate training and safety warnings as set forth in this manual. Read completely before operating.

				
<p>Do not exceed 100 psi (690 kPa) pressure on the operating system or 60 psi (414 kPa) pressure on the syringe reservoir. Higher pressures are not required and may cause a serious injury or equipment damage.</p>				

# Setup



**NOTE:** See **Typical Installation** diagram.

1. Perform Setup procedure for feed system components. See feed system manual(s).
2. Place an in-line air pressure regulator, air-water separator/filter, and shut-off/bleed valve between the air supply and the control solenoids.
3. Connect each 1/4 in. outside diameter supplied air line to the corresponding control solenoid. See **Typical Feed System Components** starting on page 7.
4. Connect chemical lines from feed system to metering valve material inlets. See **Typical Feed System Components** starting on page 7.

## Typical Installation

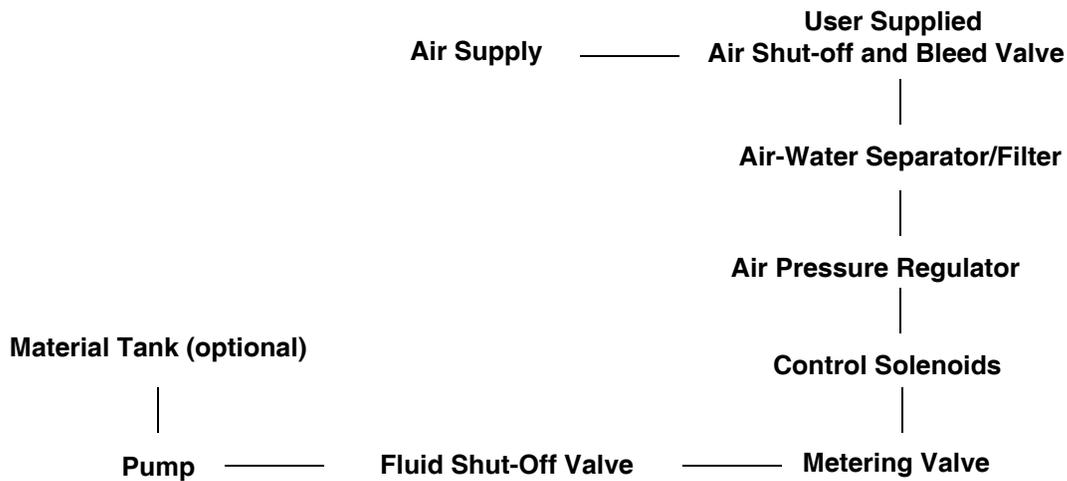


FIG. 1

# Typical Feed System Components



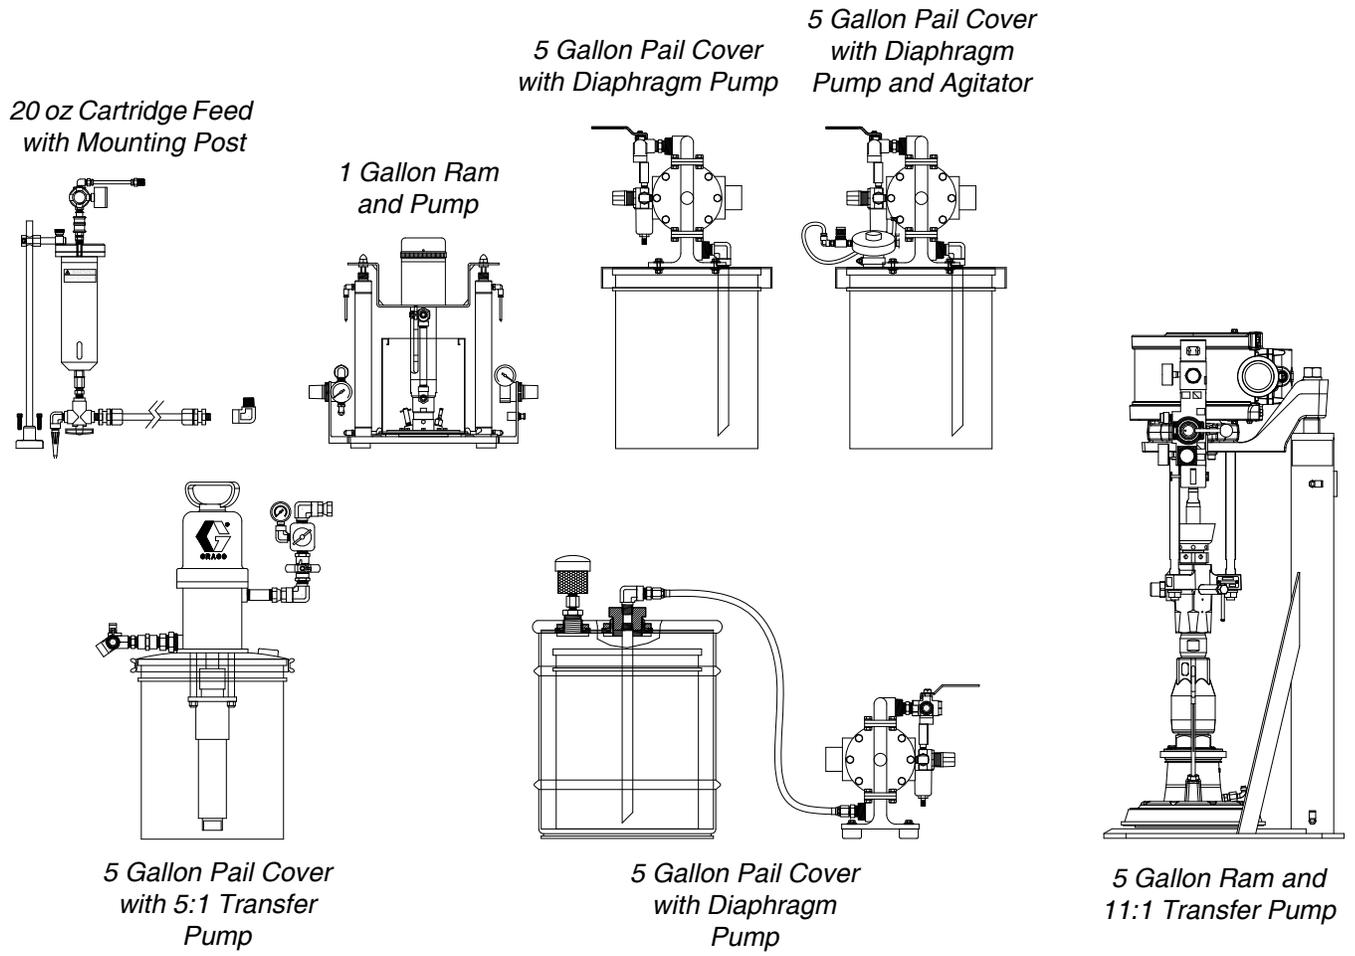


FIG. 2


## Typical Feed System Components (continued)

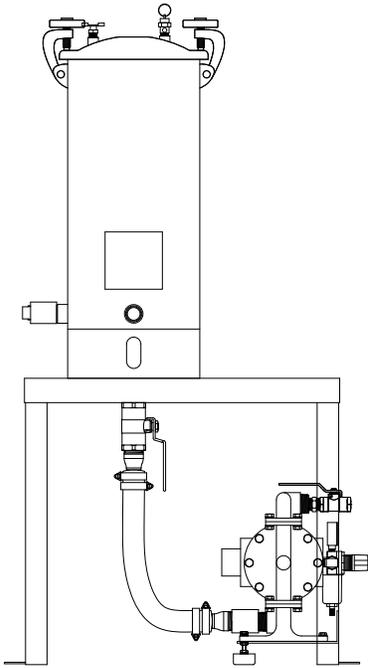


*5 Gallon Tank with Diaphragm Pump and Stand*

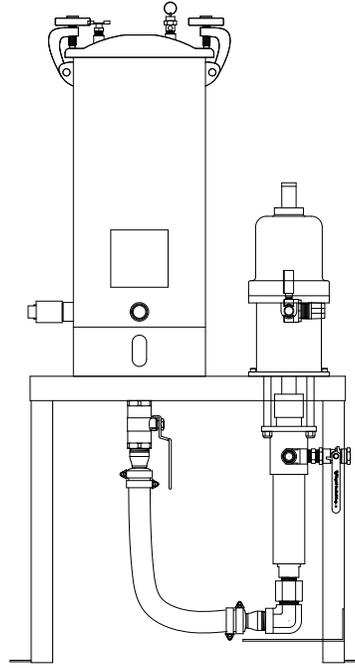

*5 Gallon Tank with 5:1 Pump and Stand*

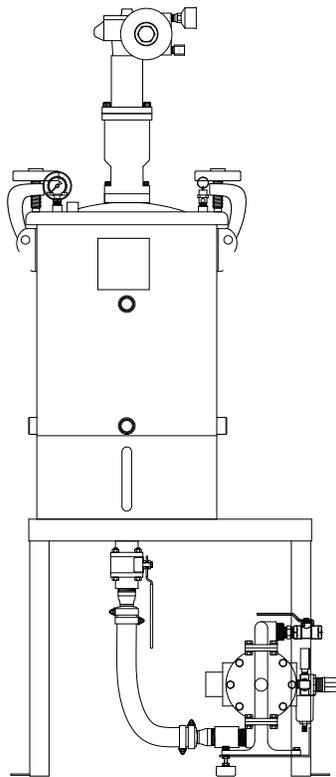

*10 Gallon Tank with Diaphragm Pump, Agitator, Vacuum, and Stand*

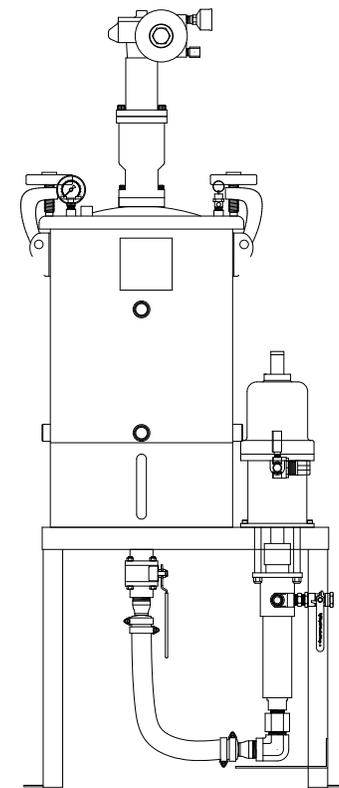

*10 Gallon Tank with 5:1 Pump, Agitator, Vacuum, and Stand*

**FIG. 3**

# Description of Operation

## Positive Displacement Sequential Function

The normal “ready” state of the system is as follows:


The dispense valve may operate with a (remote) reservoir or with a syringe (mounted with the valve). In the ready state, the syringe or reservoir contains dispensable material. The system has been purged, filling the Dispense Tube and needle with material. The Bottom Pinch-Off Piston is not pressurized (forward) but is held back by the springs, closing the Dispense Tube and holding back the dispensable material. (See “Fill” on drawing below.) The Top Pinch-Off and Dispense Pistons are not pressurized (back).

The dispense cycle begins when the controller is activated.

The Top Pinch-Off Piston first moves forward to stop material supply and the Bottom Pinch-Off Piston moves forward to release the Dispense Tube. (See “Dispense Delay” on Sequential Function drawing.)

The Dispense Piston then moves forward until stopped by the Micrometer Stroke Adjust. This squeezes a precise amount of material out of the Dispense Tube. (See “Dispense” on Sequential Function drawing.)

When the dispense cycle is complete, the spring pushes the Bottom Pinch-Off Piston back, sealing the Dispense Tube to prevent material drip. Immediately after, the Dispense Piston and Top Pinch-Off Piston withdraw allowing the material from the pressurized reservoir to refill the Dispense Tube. The system is again, in the normal “ready” state.

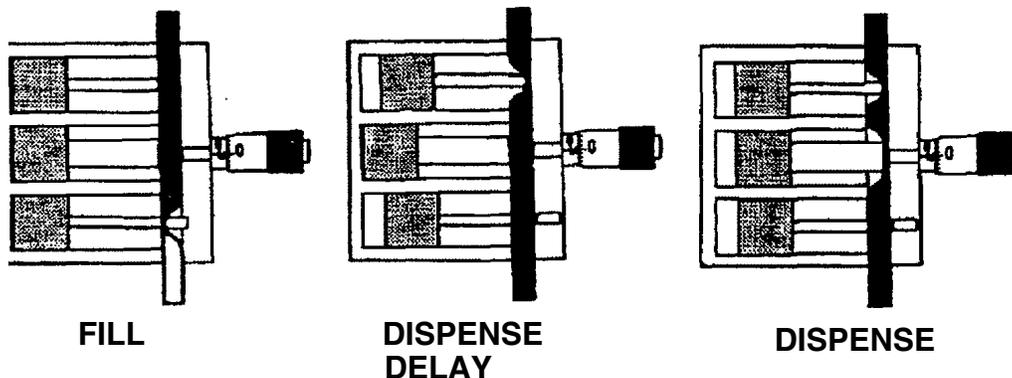

# Setup Procedure

## Mounting Dispense Valve

For optimum operation, the Dispense Valve must be mounted on a 1/2 inch (12.7 mm) support rod post or frame. When mounting, firmly affix the valve in place by tightening the Black Socket Head Cap Screw with a 5/32 inch Allen Wrench. The valve may be tilted to a maximum of  $\pm 60^\circ$  from the vertical depending on the application.

## Air Controller

Operation of the 902-20 Dispense Valve requires a controller that can provide the following:

- A minimum of 0.5 SCFM (2.3 cm<sup>3</sup>/s) of dry, unlubricated air at a minimum pressure of 70 psi (483 kPa).
- Time delay capability to allow the valve to cycle.
- Independent air pressure regulators for material reservoir and valve operation.
- "Purge capability," which is the ability to pass or not pass air to the Lower Pinch-Off Piston on the Dispense Valve.
- For semi-automatic or automatic applications, a foot switch or another automatic control to cycle the valve.
- Connection for .16" ID X .25" OD (6.35mm) pressure tubing for use between the Dispense Valve and controller.

**NOTE:** Two 3 foot (1 m) sections of pneumatic air line are provided.

# Operating Procedures

## Dry System Checkout

This is an initial checkout to determine if the setup has been properly completed. The dry checkout is conducted without any material in the system.

Attach the pressure lines from the Dispensing Valve to the air outlets on the air supply controller.

Turn on the electric and air supply.

Set the air pressure to 70 psi (483 kPa) on the system pressure gauge.

In the normal rest position, the spring holds the Lower Pitch-Off Piston back, sealing the Dispense Tube. (See "Fill" on Sequential Function drawing.)

Momentarily press the Dispense Valve Cycling Control Switch.

The Upper Pinch-Off Piston is pressurized, sealing the Dispense Tube while the Lower Pinch-Off Piston is pressurized to release the Dispense Tube. (See "Dispense Delay" on Sequential Function drawing.) The Integral Dispense Piston moves to the Micrometer Stop.

The Dispense Valve air solenoid valve should cycle and show a slight fluctuation in the system pressure gauge. (See "Dispense" on Sequential Function drawing.) When this happens, the system is correctly installed.

**NOTE:** These instructions assume the material is supplied from a valve-mounted syringe, if the material supply is remote mounted, connect the material supply hose to the valve's luer lock fitting instead.

Attach the air line to the regulator and set the air pressure control to 15 psi (103 kPa) or to the setting required for the application.

**NOTE:** When using a remote reservoir, the delivery tubing and fittings must be compatible with the material being dispensed and capable of withstanding the dispensing pressure.

## Wet System Checkout

Using the purge cycle on the air supply controller, run the material through the Dispense Line until a smooth material flow comes through the Dispensing Needle.

After the purge cycle has been completed, set the air supply controller to the manual cycle mode and cycle the Dispense Valve several times.

## Material Loading

				
<ul style="list-style-type: none"> <li>Do not exceed 100 psi (690 kPa) pressure on the operating system or 60 psi (414 kPa) pressure on the syringe reservoir. Higher pressures are not required and may cause a serious injury.</li> <li>Do not apply either operating or reservoir air pressure to the product unless all screws are in place and properly tightened, and the receiver cap and/or the reservoir are properly in place and tightened. All air connections should be fastened securely.</li> </ul>				

Place the filled syringe<sup>1</sup> of material through the syringe clamp, mating the syringe to the Dispense Tube. Then tighten the syringe clamp using the adjustment knob until snug. Install the Receiver cap Assembly to the top of the syringe.

## Periodic Maintenance

The model 902-20 PDP Dispense Valve has been engineered for easy cleanup with needle and a Disposable Dispense Tube.

### Pressure Relief Procedure



Follow the Pressure Relief Procedure whenever you see this symbol.



This equipment stays pressurized until pressure is manually relieved. To help prevent serious injury from pressurized fluid, such as splashing fluid, relieve pressure when you stop dispensing and before cleaning, checking or servicing the equipment.

1. Shut off material flow to valve.
2. Cycle the valve three times to ensure all pressurized material has been removed from the system.
3. Turn off the air pressure to the valve and disconnect all of the lines.
4. The valve is now depressurized and safe to perform maintenance on.

### Dispense Needle Replacement

Remove the luer lock type dispensing needles by grasping at the base and twisting one-quarter turn counter-clockwise. Other needles may be held in place with a nut, which must be fully unscrewed. Clean with water or solvent depending on the material dispensed. A fine wire, used cautiously, will help open clogged needles. Replace if damaged or severely clogged.

### Dispense Tube Replacement

Tube life is difficult to predict due to its dependence on the cycles, speed, downtime and material dispensed.

A reduction in shot volume is a common sign of a worn Dispense Tube. Periodic inspection of the Dispensing Tube is recommended. Replace if necessary.

To change the Dispense Tube, DO NOT disassemble the valve.


1. Depressurize the syringe or reservoir, and remove or disconnect it.
2. Pressurize the bottom Piston this is the Purge mode and remove pressure from the Top Piston. (It may be necessary to push back the Top Piston with a small pointed tool.) The Dispense Tube will now be completely free of compression.
3. Loosen the Upper and Lower Screw Knobs enough to allow the Dispense Tube to pass out the side of the valve.

**NOTE:** Different models have different dispense tube configurations. Removal and replacement of the tube assembly will vary.

4. Replacement: Replace tubes only with same or equivalent tubing. Tubing with different I.D. or O.D. will change the dispense amount; tubing with different wall thickness will leak, dribble, or have seriously shortened operating life; tubing with inferior mechanical properties will not last. Pay close attention to the way the old tube is installed and use this information to get the new one in properly.
  - Some tubes may have luer lock fittings or mechanically similar fittings and it may be necessary to disassemble them (removing the needle) to replace the tube.
  - Frequently the new tube comes cut at an angle so the tip is tapered; this allows you to pull it through luer lock or other fittings which hold the ends. After the tubing is pulled through, cut off the excess smoothly and squarely.
  - Others may use the material delivery tube - pull this tube farther through luer the pinched portion can be cut off. When the tube becomes too short it will be necessary to replace it.
5. Gently tighten the upper and lower screw knobs after the new tube and needle are replaced.
6. Return air controllers to normal operating modes.
7. Reinstall the syringe or reservoir and purge the valve. One package of replacement dispense tubes is supplied with some models. If this dispensing system is new and there is no similar device in your shop, it may be necessary to contact Dispensit to verify what replacement material/part number you need; once you know what you need, write down the part number and description here. Remember not to change the tube's wall thickness.

# Parts

## 902-20 Valve

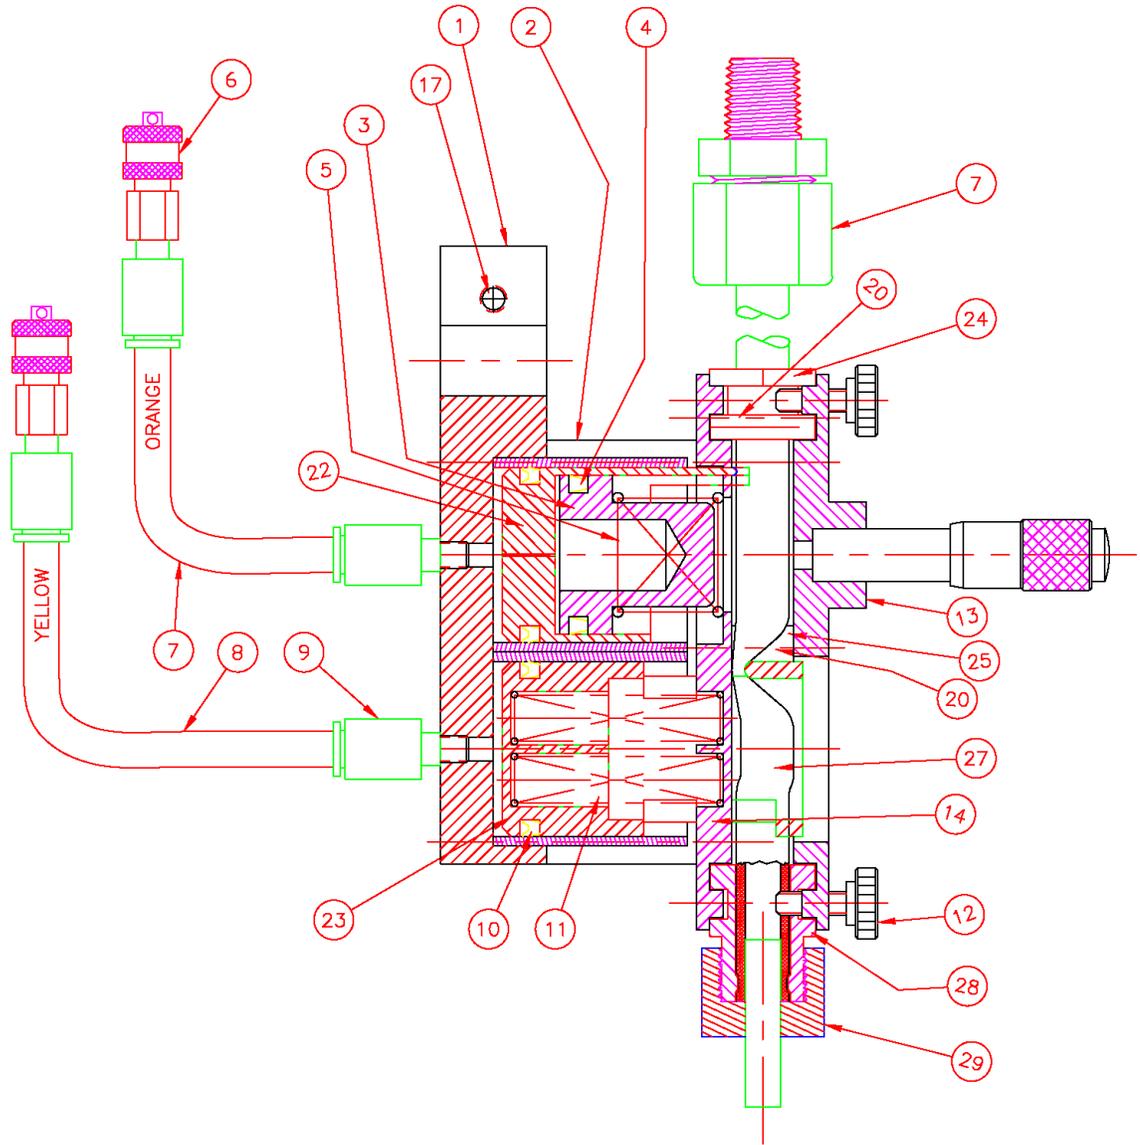

## 902-20 Valve Shared Components

Ref	Part	Description	Qty
1	A1010031	CYLINDER, 902-20, BASE ASSY	1
2	A1000141	SPACER, 902-2X, LONG	4
3	A1000090	PISTON, 902-20	1
4	95/0862/01	SEAL, U-CUP	1
5	I1000012	SPRING, COMP	1
6	94/0170/99	FITTING, CONN, QC	2
7	61/2904-OR/11	TUBE	3
8	61/2904-YL/11	TUBE	3
9	94/0740-B/99	CONNECTOR	4
10	D2000004	SEAL, U-CUP	2
11	I2000010	SPRING, DIE, MED HVY LOAD	2
12	A1010020	KNOB, BLK, PLASTIC	2
13	A1010123	PLATE, 902-20, FACEPLATE ASSY, MIC	1
14	A1000143	PLATE, 902-20, BACKPLATE	1
16	D5000019	KIT, SEAL, 902-20, #TWM	1
17	122747	SCREW	1
18	96/0187/98	SCREW, SHC	2
19	B3500025	SCREW, SHC	5
20	96/0150/98	PIN, ROLL	2
21	0577-3	SCREW	2

## 902-20 Valve Variable Components

Ref. No.	Description				Qty
		A1A09007	A1A09004	A1A09003	
22	PISTON, 902-20, TOP PISTON	A1000086	A1000161	A1000162	1
23	PISTON, 902-20, PINCH LOWER	A1000087	A1000163	A1000164	1
24	ADAPTER, 792-20, TBE, TOP	A7000027	A1000050	A7000028	1
25	SPACER, 902-20, SPACER, SHORT	A1000089	A1000089	A1000142	3
27	TUBE	A1020214	A1020166-10	A1020216	1
28	TUBE, ADPTR	A1000428	NA	A7000030	1
29	NEEDLE, 792-20, NDL ASSY	A7010001	NA	A7010002	1
19	SCREW, SHC	B3500025	NA	0577-3	5
12	KNOB, BLK, PLASTIC	NA	A1010020	NA	2

## Valve Disassembly

Reference numbers are provided to help identify each part of the 902-20. Refer to the drawing at the back of this manual.

**NOTE:** In addition to the seal kit, these are the parts most likely to require replacement: dispense tube (15), needle, and needle block.

1. Turn off the material inlet pressure to the valve.
2. Turn off the air intake pressure to the valve.
3. Remove the air pressure lines into (8 & 8). Do not remove the fittings themselves.
4. Remove the material inlet line.
5. At this point you can conveniently remove the dispense valve from its mounting.
6. Disconnect the needle, needle block, and dispense tube fittings.
7. Remove the faceplate assembly (14); loosen and remove three caphead screws (22) holding it in place. There will be three standoffs released by those screws.

There is a spring behind the backplate. In the next step, hold the backplate with a thumb by the lower (pinch-off) piston, while removing the screws.

8. Loosen and remove two caphead screws (20) holding the backplate (16) in place. The backplate, the bottom piston (9), and its springs (11), will come loose from the rest of the valve. You may need to push on the dispense piston (4) slightly to help with the removal.
9. Remove the compression spring (5) from the top piston (6).
10. Remove the top piston/pinch off (6) and dispense piston (4).
11. Separate the dispense piston (4) and the top/pinch off (6) piston
12. It is not necessary to separate the base (1) and its spacer rods (2).
13. Separate back plate (16) from bottom piston (9) and two compression springs (11). You may use a tool to hold the compression springs in place while you move the pack plate.

## Cleaning

1. Remove all O-rings and U-seals.
2. Use the correct solvent on all parts of the valve until it is clean.
3. Lubricate the cylinder bores, the valve sleeve bores and seals with a very light coating of the lubricant that comes in the seal kit. The Valve is now ready for reassembly.

# Valve Reassembly

**NOTE:** Use the new parts that are in your seal kit where possible.

**NOTE:** Use caution as you install the new U-seals into the sleeve assembly so you don't pinch or tear them. Do this by making sure they are lubricated, and by tucking the lips of the U-seal inward before uniformly pushing it down into the valve sleeve.

Lightly lubricate parts to facilitate reassembly.

Note what direction the old seals face, as you remove them; make sure the new seals face in the proper direction when you install them.

1. Replace the U-seal (10) on the bottom piston (9).
2. Replace the U-seal (also 10) on the top piston (6).
3. Replace the U-seal (7) on the dispense piston (4).
4. Make sure that you have lubricated cylinders and pistons so you can reassemble them.
5. Reassemble the bottom piston (9) and the compression springs (11) with the back plate (16). You will need a tool to pry the springs down so that they fit under the back plate. Position the springs properly.
6. Reassemble the dispense piston (4) and the top pinch off piston (6). This is easiest if you tilt the dispense piston to slide it in place. Use care (and a blunt instrument if needed) to make sure the U-seal fits in properly.
7. Return this (4 & 6) assembly into the upper cylinder in the base (1). Add lubrication if needed. Again, use care (and a blunt instrument if needed) to make sure the U-seal fits in properly. Position the upper ridge on the piston towards the top (mounting end) of the base.
8. Place the compression spring (5) over the dispense piston (4).
9. Reinstall the bottom piston (9) and backplate (16) assembly. Add lubrication if needed. Again, use care (and a blunt instrument if needed) to make sure the U-seal fits in properly. Align the backplate holes and the top piston pinch-off to make the parts fit properly.
10. Hold the plate in place with a thumb and install the two 3/8-inch caphead screws (20) in the recessed holes in the backplate to hold it in place. Turn the screws down, but not tight, so that movement is possible to align the rest of the parts. Holding all the parts in place for the next step can be a little difficult; here are two ways to approach the task. (1) Position the valve so the backplate is level, then stand the spacer rods in place on it and lower the faceplate and screws into them. (2) Hold the faceplate so three fingers hold the screws in place, put the spacers on the screws, then bring the valve into place on the faceplate.
11. Reinstall the faceplate/micrometer (14) using the remaining three caphead screws, and three spacer rods (18). Tighten the screws.
12. Complete the job by remounting the valve and installing the dispense tube.

# Troubleshooting

If operating difficulties occur, review the symptoms below. With each problem there are one or more possible causes which should be investigated to resolve the situation.

## Nothing Happens

If absolutely nothing happens when trying to cycle the Dispense Valve, check the pneumatic power. Check the foot-switch or cycle start switch to be sure it is plugged in.

## Valve Cycles, Nothing Dispensed

First, try to purge the unit; this should fix most situations. If it doesn't, check to see that there is enough pressure to the reservoir. Perhaps the Reservoir/Tube/Needle path is clogged; examine and clear or replace as necessary. Consider whether the material could have "set up" in the system (Refer to Wet Checkout and Cleanup sections).

## Irregular Volume Dispensed

Irregular dispensing can usually be attributed to faulty material. The material must be a smooth (homogeneous) mixture, without any air trapped in it. A second cause could possibly be that the material is not filling the Dispense Tube fully and in time. Check the reservoir pressure as it may be too low for the type of material being dispensed and/or the cycle time may be too fast. Cycle time is a function of the air supply controller. To adjust, follow the directions found in the controller operating manual.

## Reduced Volumes Dispensed

Check to see if Dispense Tube requires replacement or whether needle is partially clogged (Refer to Cleanup Section). Wrong pinch tube installed (smaller I.D. will give smaller dispense).

## Tubing Life Very Short

Incorrect pinch tube (tube wall thickness is too large).

## Valve Drips

Pinch tube needs replacing; wrong pinch tube used (wall thickness too small).

## Slow or Sluggish Cycle Time

This may be due to inadequate lubrication of the piston walls. Remove the upper and Lower Pinch-Off Pistons and the Dispense Piston. Apply a very thin film of compatible light lubricating oil to the outside diameter surfaces of the pistons and the U-seals and reassemble. This will restore smooth and consistent operation.

# Technical Data

**NOTE:** See feed system manuals for dimensions, weights, and wetted parts lists for those components. Dimensions, weights, and wetted parts for components not covered in component feed system manuals and for combined assemblies are listed below.

Maximum Ambient Temperature . . . . .	110°F (43°C)
Maximum Operating Temp. . . . .	150°F (65°C)
Maximum Outlet Fluid Working Pressure . . . . .	60 psi (0.4 MPa, 4 bar)
Maximum Air Working Pressure . . . . .	100 psi (0.7 MPa, 7 bar)
Minimum Air Working Pressure . . . . .	70 psi (480 kPa, 4.8 bar)
Maximum Material Inlet Pressure . . . . .	60 psi (0.4 MPa, 4 bar)
Supplied Air Requirements . . . . .	1 to 3 cfm at 80 psi to 100 psi
Shot Size Range (depending on metering rods selected)	0.002 cc continuous
Maximum Cycle Rate (application dependent, heat required) . . . . .	Up to 60 cycles per minute
Dimensions (H x L x W), height to end of material inlet block . . . . .	5.60 x 5.49 x 1.5 in. (142 x 140 x 38 mm) <i>Graco-supplied Feed System Assemblies</i> <i>(depends on selected options):</i> <i>Smallest: 22.5 x 10 x 4 in. (572 x 254 x 102 mm)</i> <i>Largest: 60 x 28 x 19 in. (1524 x 711 x 483 mm)</i>
Weight . . . . .	<i>Metering Valve: 2 - 4 lb (0.91 - 1.81 kg)</i>
Wetted Parts . . . . .	<i>Metering Valve: UHMWPE, fluoroelastomer, EPDM, PTFE, Acetal</i> <i>Graco-supplied Feed System Hoses and Fittings: Mild steel, 303/304, PTFE, buna, polyethylene, polypropylene</i> <i>Graco-supplied Tanks: Polyethylene, 303/304, mild steel</i>



# Graco Standard Warranty

Graco warrants all equipment referenced in this document which is manufactured by Graco and bearing its name to be free from defects in material and workmanship on the date of sale to the original purchaser for use. With the exception of any special, extended, or limited warranty published by Graco, Graco will, for a period of twelve months from the date of sale, repair or replace any part of the equipment determined by Graco to be defective. This warranty applies only when the equipment is installed, operated and maintained in accordance with Graco's written recommendations.

This warranty does not cover, and Graco shall not be liable for general wear and tear, or any malfunction, damage or wear caused by faulty installation, misapplication, abrasion, corrosion, inadequate or improper maintenance, negligence, accident, tampering, or substitution of non-Graco component parts. Nor shall Graco be liable for malfunction, damage or wear caused by the incompatibility of Graco equipment with structures, accessories, equipment or materials not supplied by Graco, or the improper design, manufacture, installation, operation or maintenance of structures, accessories, equipment or materials not supplied by Graco.

This warranty is conditioned upon the prepaid return of the equipment claimed to be defective to an authorized Graco distributor for verification of the claimed defect. If the claimed defect is verified, Graco will repair or replace free of charge any defective parts. The equipment will be returned to the original purchaser transportation prepaid. If inspection of the equipment does not disclose any defect in material or workmanship, repairs will be made at a reasonable charge, which charges may include the costs of parts, labor, and transportation.

**THIS WARRANTY IS EXCLUSIVE, AND IS IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO WARRANTY OF MERCHANTABILITY OR WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE.**

Graco's sole obligation and buyer's sole remedy for any breach of warranty shall be as set forth above. The buyer agrees that no other remedy (including, but not limited to, incidental or consequential damages for lost profits, lost sales, injury to person or property, or any other incidental or consequential loss) shall be available. Any action for breach of warranty must be brought within two (2) years of the date of sale.

**GRACO MAKES NO WARRANTY, AND DISCLAIMS ALL IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, IN CONNECTION WITH ACCESSORIES, EQUIPMENT, MATERIALS OR COMPONENTS SOLD BUT NOT MANUFACTURED BY GRACO.** These items sold, but not manufactured by Graco (such as electric motors, switches, hose, etc.), are subject to the warranty, if any, of their manufacturer. Graco will provide purchaser with reasonable assistance in making any claim for breach of these warranties.

In no event will Graco be liable for indirect, incidental, special or consequential damages resulting from Graco supplying equipment hereunder, or the furnishing, performance, or use of any products or other goods sold hereto, whether due to a breach of contract, breach of warranty, the negligence of Graco, or otherwise.

## **FOR GRACO CANADA CUSTOMERS**

The Parties acknowledge that they have required that the present document, as well as all documents, notices and legal proceedings entered into, given or instituted pursuant hereto or relating directly or indirectly hereto, be drawn up in English. Les parties reconnaissent avoir convenu que la rédaction du présente document sera en Anglais, ainsi que tous documents, avis et procédures judiciaires exécutés, donnés ou intentés, à la suite de ou en rapport, directement ou indirectement, avec les procédures concernées.

# Graco Information

## Sealant and Adhesive Dispensing Equipment

For the latest information about Graco products, visit [www.graco.com](http://www.graco.com).

For patent information, see [www.graco.com/patents](http://www.graco.com/patents).

**TO PLACE AN ORDER**, contact your Graco distributor, go to [www.graco.com](http://www.graco.com) and select "Where to Buy" in the top blue bar, or call to find the nearest distributor.

***If calling from the US: 800-746-1334***

***If calling from outside the US: 0-1-330-966-3000***

*All written and visual data contained in this document reflects the latest product information available at the time of publication. Graco reserves the right to make changes at any time without notice.*

Original instructions. This manual contains English. MM 332097

**Graco Headquarters:** Minneapolis

**International Offices:** Belgium, China, Japan, Korea

**GRACO INC. AND SUBSIDIARIES • P.O. BOX 1441 • MINNEAPOLIS MN 55440-1441 • USA**  
**Copyright 2010, Graco Inc. All Graco manufacturing locations are registered to ISO 9001.**

[www.graco.com](http://www.graco.com)

Revision B, April 2017